



MULLION IS NOTCHED AT TOP FACE TO FIT FLUSH INTO TOP BLOCK. MULLION IS PUSHED HORIZ OVER BLOCKS INTO PLACE.

ATTACH MULLION TO FRP BLOCKS WITH SS SCREWS TOP & BOTTOM

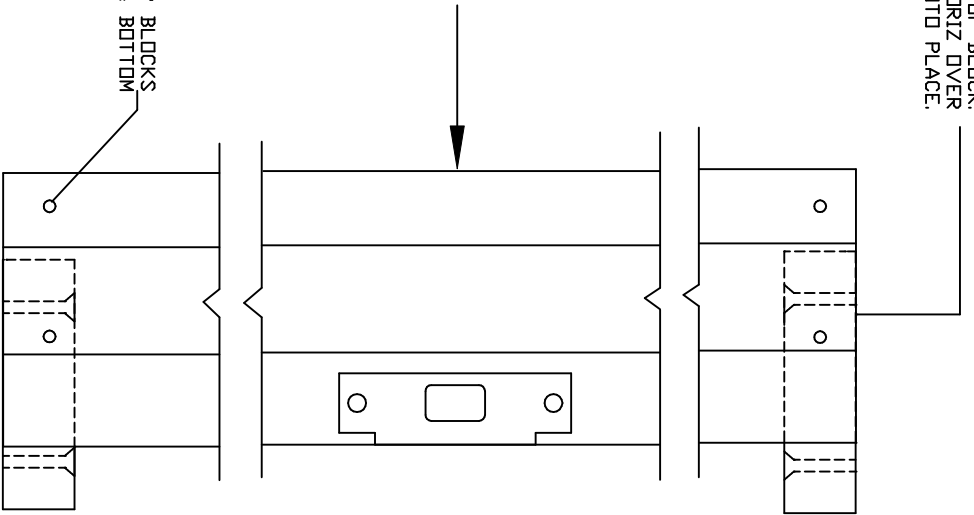

HEAD LOCATION WITH PORTION OF STOP REMOVED. HEAD FACTORY REINFORCED TO RECEIVE BLOCK.

SOLID FRP BLOCK WITH SS SCREWS TO REINFORCED FRAME HEAD

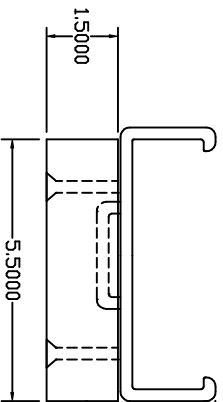


ATTACH MULLION TO FRP BLOCKS WITH SS SCREWS (MATCH HINGE LOCATIONS)

ASA STRIKE BOTH SIDES OF MULLION (BY OTHERS)

SOLID FRP STOP CHEMICALLY WELDED TO MULLION PIECES


FRP MULLION MATCH FRAME PROFILE

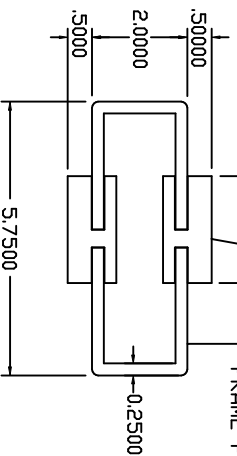

SECTION

SS TAPCONS TO FLOOR (BY OTHERS)

SOLID FRP BLOCK

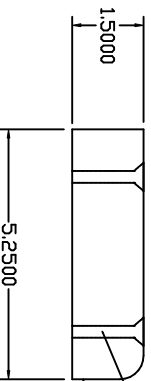

MULLION SIDE ELEVATION

FRP DOOR FIXED MULLION

Fixed mullion @ pair of doors where lockable

hardware is required.

UNIVERSAL PULTRUSIONS L.L.C

PO BOX 1289
MARSHALL, AR 72650
PH 870-448-4406
FX 870-448-5120

9/09

